

# ALFA



## MESSAGE READER INSTALLATION



SERVICE

# INSTALLATION PROCEDURE

1. Enter the **Blue&Me™** portal from the official ALFA ROMEO web site and download the .zip file containing the Message Reader application package to be installed on **Blue&Me™**.
2. Open the .zip file downloaded from the **Blue&Me™** portal, you are recommended to extract it to a dedicated folder (ex.: c:\Blue&Me).
3. From extracted files, copy into a previously formatted USB storage device the following files:
  - install.inf**
  - SMS\_Reader.ARM920.CAB**
4. The USB storage device will therefore contain these two files:
  - install.inf**
  - SMS\_Reader.ARM920.CAB**
5. Connect the USB storage device to the **Blue&Me™** USB port in the car (glove compartment, see the picture).
6. Fit the electronic key into the ignition device.
7. **Blue&Me™** will show on the instrument panel display the message **"UPDATE IN PROGRESS"** and it will say **"update started"** (failing this procedure, remove the electronic key from the ignition device and then refit it).

**WARNING** *No control button on the steering wheel shall be pressed during the update procedure.*

8. When update is completed, **Blue&Me™** will show on the instrument panel display the message **"UPDATE COMPLETE"** and it will say **"update complete, please remove the USB memory"**.
9. Press button  and then use buttons / to find the menu option **"MESSAGE READER"** in the **Blue&Me™** Main Menu.

**Repeat the above procedure right from the start if the option "MESSAGE READER" is not present in the Blue&Me™ Main Menu (performed procedure was unsuccessful).**



## QUALITY

ASSISTENZA TECNICA - INGEGNERIA ASSISTENZIALE  
Largo Senatore G. Agnelli, 5 - 10040 Volvera - Torino (Italia)  
Fiat Auto S.p.A. - Pubblicazione n° 60431663  
1° Edition - 07/2006  
Reserved property. Reproduction, even only in part is prohibited without permission, in written form, of Fiat Auto S.p.A.

