

F I A T D O B L Ó



S O U N D S Y S T E M

CONTENTS

INTRODUCTION	3	FADER adjustment	11
Advice	3	LD function	11
- Road safety	3	Antitheft protection	11
- Reception conditions	3		
- Care and maintenance	4	RADIO (Tuner)	12
- Compact Disc	4	Introduction	12
Technical data	5	Selecting the frequency band	12
		Presetting buttons	12
QUICK GUIDE	6	Storing the last station heard	12
General	8	Automatic tuning	12
- Radio section	8	Manual tuning	13
- Compact Disc section	8	A-STORE function	13
- Audio section	8	Emergency alarm reception	14
		EON function	14
FUNCTIONS AND ADJUSTMENTS	9	Stereophonic stations	14
Turning the sound system on	9	Menu	14
Turning the sound system off	9	- MENU button functions	14
Selecting Radio functions	9	- AF function	15
Selecting CD/CD Changer functions	9	- TA function	15
Audio source memory function	9	- REG function	16
Volume adjustment	9	- SVC function	17
SVC function	9	- EXT VOL function	17
MUTE/PAUSE function	10	- IGN TIME function	17
Audio adjustments	10	- DEFAULT function	17
Tone adjustment	10		
Balance adjustment	10		

COMPACT DISC PLAYER	18
Introduction	18
Selecting CD player	18
Inserting/ejecting CD	18
Possible error messages	19
Display information	19
Select track	19
Fast forward/backward	19
Pause function	20
Antitheft protection.....	20
- Entering the secret code	20
- Code Card	20
CD CHANGER (CDC)	21
Introduction	21
Selecting the CD Changer	21
Possible error messages	21
Selecting the CD	21
TROUBLESHOOTING	22

INTRODUCTION

The vehicle sound system, fitted with CD player has been designed in accordance with the special features of the passenger compartment, with a personalised design that blends with the style of the dashboard. The sound system cannot be adapted to other vehicles and for this reason it cannot be removed.

The radio is installed in a user-friendly position for the driver and passenger and the graphics on the front panel make location of the controls quick, facilitating use.

The CD Changer is available at Lineaccessori Fiat.

In the following pages you will find the instructions for use, which you are advised to read through carefully. The instructions also contain the procedure for controlling the CD Changer (if provided) through the radio. For the instructions for use of the CD Changer refer to the specific manual.

ADVICE

Road safety

You are advised to learn how to use the various radio functions (e.g.: storing stations) before starting to drive.

Reception conditions

Reception conditions change constantly when driving. Reception may be disturbed by the presence of mountains, buildings or bridges particularly when far away from the station being listened to.

IMPORTANT When receiving traffic information, the volume may be higher than normal.



WARNING

Too high a volume when driving can put the driver's life at risk and that of other people. Therefore the volume should always be adjusted in such a way that it is always possible to hear the noises of the surrounding environment (e.g.: horns, ambulance, police sirens, etc.).

Care and maintenance

The radio structure ensures long operation with no need for particular maintenance. In the event of a fault, contact a Fiat Dealership.

To clean the front panel only use a soft, antistatic cloth. Cleaning and polishing products might spoil the surface.

Compact Disc

Remember that dirt, marks or distortion on Compact Disc can cause skipping. To obtain optimum playing conditions we give the following advice:

- Only use Compact Discs which have the following brand:



- Carefully clean all Compact Discs of fingerprints and dust using a soft cloth. Support Compact Discs from the outer circumference and clean from the centre outwards;
- Never use chemical products for cleaning (e.g.: spray cans, antistatic or thinners) as they might damage the surface of Compact Discs;
- After use, put Compact Discs back in their container, to avoid marks or scratches that may cause skipping when playing;
- Do not expose Compact Discs to direct sunlight, high temperatures or damp for prolonged lengths of time to prevent them from bending;
- Do not stick labels or write on the recorded surface of Compact Discs.

To remove a Compact Disc from its container, press the centre and raise the disc carefully, holding it by the outer circumference.

Always hold Compact Discs by the outer circumference. Never touch the surface.

To remove fingerprints and dust, use a soft cloth starting from the centre of the Compact Disc outwards.

Do not use highly scratched, cracked, or distorted discs, etc. The use of these discs will involve malfunctioning or damage to the player.

For optimal playing use original CDs only. Regular operation is not guaranteed if using R/RW CDs not properly mastered and/or CDs with max. capacity higher than 650 MB.

IMPORTANT Do not use the protective sheets for CD in commerce or discs with stabilisers, etc. as they might get stuck in the internal mechanism and damage the disc.

IMPORTANT Should copy-protected CDs be used, then, few seconds may be required for playing them. Moreover, due to the proliferation of always new and different protection methods, it is not guaranteed that the CD player can play whatever protected disc. Copy protection is often indicated on the CD cover in small letters or hard to read characters. Usually it is indicated by writings like: "COPY CONTROL", "COPY PROTECTED", "THIS CD CANNOT BE PLAYED ON A PC/MAC", or it is identified by symbols like:



Protected discs (and their cover) very often are not marked with the audio CD identification symbol:



IMPORTANT The CD player can read most of the compression systems currently on sale (e.g.: LAME, BLADE, XING, FRAUNHOFER) however, due to the evolution of these systems, reading of all compression formats is not guaranteed.

IMPORTANT When loading a multi-session CD, only the first session will be played.

TECHNICAL DATA

Power: 4 x 20 W

Version Low

2 front 100 mm full-range installed on the dashboard

Note: 2 full-range with double coil for telephone

Version Hi-Fi

2 front full-range installed on the dashboard;

2 165 mm midwoofer installed on the door;


2 rear coaxial high speakers installed on the door;

Note: 2 full-range with double coil for telephone

CD Changer presetting

Anti-theft protection system

QUICK GUIDE

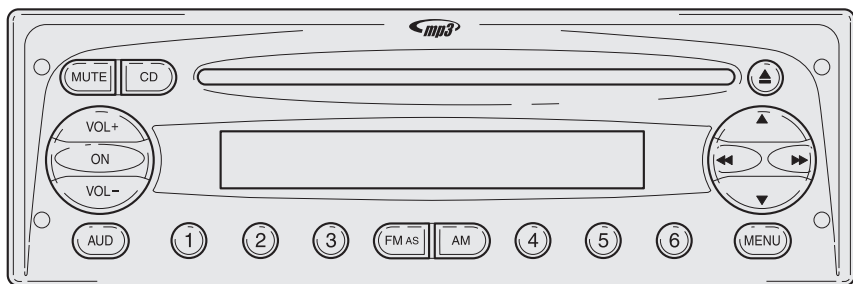

F0A0450m

AUDIO SECTION

- Loudness function
- Standard equalization
- Personal equalization
- Automatic volume changing according to vehicle speed
- MUTE function

RADIO SECTION


- Traffic information reception (TA)
- Automatic storage of 6 stations in the dedicated FM band - FMT (AS - Autostore)



CD SECTION

- Play / Pause
- Previous / next track selection
- FF / FR
- Previous / next directory selection

Button	GENERAL FUNCTIONS	Mode
ON	On	Short push on button
	Off	Long push on button
VOL+	Volume up	Press button
VOL-	Volume down	Press button

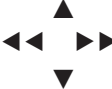Tasto	GENERAL FUNCTIONS	Mode
FM AS	Radio band selection FM1, FM2, FM Autostore	Brief cyclic button pressing
AM	Radio band selection MW, LW	Brief cyclic button pressing
CD	Audio source selection (radio/CD/CD-Changer)	Brief cyclic button pressing
MUTE	Volume on/off (MUTE / PAUSE)	Brief button pressing
AUD	Audio settings: bass (BASS), treble (TREBLE), right/left sound adjustment (BALANCE), front/rear sound adjustment (FADER)	Menu activation: brief button pressing Adjustment selection: press button ▲ or ▼ Value adjustment: press button ◀◀ or ▶▶
MENU	Advanced functions adjustment	Menu activation: brief button pressing Adjustment selection: press button ▲ or ▼ Value adjustment: press button ◀◀ or ▶▶

Tasto	RADIO FUNCTIONS	Mode
	Radio station tuning: • Automatic tuning • Manual tuning	Automatic tuning: press button ◀◀ or ▶▶ (long pressing for fast forward) Manual tuning: press button ▲ or ▼ (long pressing for fast forward)
1 2 3 4 5 6	Current radio station storage Stored station recall	Long button pressing respectively for preset/memories from 1 to 6 Brief button pressing respectively for preset/memories from 1 to 6

Tasto	CD FUNCTIONS	Mode
▲	CD ejection	Brief button pressing
	Previous/next track playback CD track fast forward/backward	Brief pressing on buttons ◀◀ or ▶▶ Long pressing on buttons ◀◀ or ▶▶
	Previous/next CD playback (for CD Changer)	Brief pressing on buttons ▲ or ▼

GENERAL

The set possesses the following functions:

Radio section

- PLL tuning with FM/AM/MW/LW frequency bands;
- RDS (Radio Data System) with TA (traffic announcements) - TP (Program Type) - EON (Enhanced Other Network) - REG (Regional programmes);
- AF: alternative frequency search selection in RDS mode;
- emergency alarm presetting;
- automatic/manual station tuning;
- FM Multipath detector;
- manual storage of 36 stations: 18 in the FM band (6 in FM1, 6 in FM2, 6 in FMT), 6 in the MW band and 6 in the LW band;
- automatic storage (Autostore function) of 6 stations in FM band;
- SVC function: automatic volume adjustment with vehicle speed;
- automatic Stereo/Mono switching.

Compact Disc section

- Direct disc selection;
- Track selection (forward/backward);
- Fast forward/backward;
- CD Display function: displaying CD name/time elapsed from start of track;
- Playing audio CDs and R/RW CDs.



On multimedia CDs in addition to sound tracks also data tracks are recorded. Playing one of these CDs may cause rustling and such a volume as to compromise road safety, as well as causing damage to the final stages and speakers.

Audio section

- Mute/Pause function;
- Soft Mute function;
- Loudness function;
- 7 band graphic equalizer;
- Separate bass/treble adjustment;
- Right/left channel balancing.

FUNCTIONS AND ADJUSTMENTS

TURNING THE SOUND SYSTEM ON

To turn the sound system on, press button ON.

When turning the sound system on, the volume level will be brought to 20 if it was set to over.

If the radio is turned on with the ignition key at STOP, it will turn off automatically after about 20 minutes. It is however possible to turn the radio on again for other 20 minutes by pressing button ON (see paragraph "IGN TIME function").

TURNING THE SOUND SYSTEM OFF

Keep button ON pressed.

SELECTING RADIO FUNCTIONS

Pressing briefly and repeatedly button FMAS it is possible to select the following functions in sequence:

TUNER ("FM1", "FM2", "FMT");

Pressing briefly and repeatedly button AM it is possible to select the following functions in sequence:

TUNER ("MW", "LW").

SELECTING CD/CD CHANGER FUNCTIONS

Pressing briefly and repeatedly button CD it is possible to select the following audio sources in sequence:

CD (only if the Compact Disc is inserted);

CHANGER (only if the CD Changer is connected).

AUDIO SOURCE MEMORY FUNCTION

If while listening to a CD another function is selected (e.g.: the radio), playing is stopped and when the CD mode is resumed, it starts again from the point in which it was stopped.

If while listening to the radio another function is selected, when the Radio mode is resumed, it is tuned to the last station selected.

VOLUME ADJUSTMENT

To adjust the volume press buttons VOL+ or VOL-.

If the volume level is changed during the broadcast of a traffic bulletin, the new setting is maintained only until the end of the bulletin.

SVC FUNCTION

The SVC function makes it possible to automatically adapt the volume level to the speed of the vehicle, increasing it as the speed increases to maintain the ratio with the noise level inside the passenger compartment.

See section MENU for activating/deactivating this function.

MUTE /PAUSE FUNCTION (turning off the volume completely)

To switch on the Mute function, briefly press the button MUTE. Volume will gradually lower and the display will show the word "MUTE" (when in radio mode) or "PAUSE" (when in CD or CD-Changer mode).

To switch off the Mute function, press the button MUTE again. Volume will gradually become louder returning to the value set before switching on the Mute function.

Changing volume will deactivate the Mute function and the volume will be set to the new level selected.

With the Mute function on:

- if an emergency alarm or a traffic bulletin arrives with the TA function on, the message ignores the Mute function. The Mute function will be resumed at the end of the traffic announcement.

AUDIO ADJUSTMENTS

The options proposed by the audio menu differ according to the audio source selected: AM/FM/CD/CDC.

To change Audio functions, press briefly button AUD. The display will show "BASS".

To scroll the Menu options, use buttons ▲ or ▼. To change the setting of the option selected, press buttons ◀◀ or ▶▶.

The display will show the current status of the function selected.

The functions controlled by the menu are the following:

- BASS (bass adjustment);
- TREBLE (treble adjustment);
- BALANCE (right/left balance);
- FADER (front/rear balance);
- LD (Loudness on/off);
- PRESET (standard equalization activation and selection);
- XX USER (personal equalization setting).

TONE ADJUSTMENT (bass/treble)

Proceed as follows:

- Use button ▲ or ▼ to select "BASS" or "TREBLE" in the AUDIO menu;
- press button ◀◀ or ▶▶ to increase/decrease the basses or trebles.

Pressing the buttons briefly the change is gradual by steps. Pressing longer, changing is faster.

BALANCE ADJUSTMENT

Proceed as follows:

- Use button ▲ or ▼ to select "BALANCE" in the AUDIO menu;
- press button ◀◀ to increase the sound from the right speakers or button ▶▶ to increase the sound from the left speakers.

Pressing the buttons briefly the change is gradual by steps. Pressing longer, changing is faster.

Select "◀◀ 0 ▶▶" to set the same value for both right and left speakers.

FADER ADJUSTMENT

Proceed as follows:

- Use button ▲ or ▼ to select “FADER” in the AUDIO menu;
- press button ◀◀ to increase the sound from the rear speakers or button ▶▶ to increase the sound from the front speakers.

Pressing the buttons briefly the change is gradual by steps. Pressing longer, changing is faster.

Select “◀◀0▶▶” to set the same value for both front and rear speakers.

LD FUNCTION

The Loudness function improves the sound volume when listening at low level, increasing the basses and trebles.

To switch the function on/off, use button ▲ or ▼ to select “LD” in the AUDIO menu. The function condition (on or off) is shown on the display for few seconds by “LD ON” or “LD OFF”.

PRESET/XX EQ SET*/CLASSIC/ ROCK/JAZZ functions (equalizer on/off)

The integrated equalizer can be turned on or off. With the equalizer off, it is possible to change the sound settings only adjusting the bass (“BASS”) and treble tones (“TREBLE”), while activating the function makes it possible to adjust the sound curves.

To turn the equalizer off, select “PRESET” by means of button ◀◀ or ▶▶.

To turn the equalizer on, use button ◀◀ or ▶▶ to select one of the following options:

- “USER” (adjustment of the 7 equalizer bands that can be changed by the user);
- “CLASSIC” (predefined equalizer adjustment for best playing of classic music);
- “ROCK” (predefined equalizer adjustment for best playing of rock and pop music);
- “JAZZ” (predefined equalizer adjustment for best playing of jazz music).

When one of the equalizer settings is on, the display shows “EQ”.

*XX EQ SET function (only if the USER equalizer setting has been selected)

To set a personal equalizer adjustment, use button ▲ or ▼ to select USER and then press button ▼ for long.

The display will show for about 2 seconds “XX EQ SET” and then a graph with 7 bars, where each bar represents a frequency. Choose the bar to be adjusted using button ◀◀ or ▶▶; the bar chosen starts to flash and it is possible to adjust it using button ▲ or ▼.

To store the new settings, press button AUD again or wait for about 10 seconds. The display will show the word “MEN” together with the graph with 7 bars.

ANTITHEFT PROTECTION

Refer to section “CD PLAYER”.

RADIO (Tuner)

INTRODUCTION

When the set is turned on the last function selected before turning off is played (Radio, CD or CD Changer).

To select the Tuner source while listening to another audio source, press briefly buttons FMAS or AM, according to the required frequency band.

When Tuner is on, the display will show the selected station name (RDS stations only) (or frequency), the frequency band (e.g.: FM1) and the preselection button number (e.g.: P1).

SELECTING THE FREQUENCY BAND

If in the Tuner mode, briefly and repeatedly press button FMAS or AM to select the required frequency band.

Every time the button is pressed the following bands are selected in sequence:

- Pressing button FMAS: “FM1”, “FM2”, “FMT”;
- Pressing button AM: , “MW” and “LW”.

Each band is shown by the respective wording on the display.

The last station selected in the respective frequency band will be tuned.

The FM band is divided into sections: FM1, FM2 and FMT. The FMT reception band is reserved to the stations stored automatically with the Autostore function.

PRESETTING BUTTONS

The buttons with symbols from 1 to 6 make it possible to set the following pre-settings:

- 18 in the FM band (6 in FM1, 6 in FM2, 6 in FMT);
- 6 in the MW band;
- 6 in the LW band;

To call a preset station, choose the required frequency band and then press briefly the corresponding preset button (from 1 to 6).

Pressing the respective preset button for longer than 2 seconds will store the tuned station. Storing is confirmed by a beep.

STORING THE LAST STATION HEARD

The radio automatically keeps in storage the last station heard for each reception band, which is then tuned when the radio is turned on or the reception band is changed.

AUTOMATIC TUNING

Briefly press button ◀◀ or ▶▶ to start automatically searching the tuning for the next station that it is possible to receive in the direction chosen.

If button ◀◀ or ▶▶ is pressed for longer, quick searching takes place. When the button is released, the tuner stops on the next receivable station.

If the TA function is on (traffic information), the tuner only searches stations which broadcast traffic bulletins.

MANUAL TUNING

This allows manual station searching in the chosen band.

Select the required frequency band and then press briefly and repeatedly button ▲ or ▼ to start searching in the chosen band. Pressing one of the buttons ▲ or ▼ longer obtains fast forward searching, which is stopped when the button is released.

A-STORE FUNCTION (automatic station storage)

To switch on the A-STORE function, keep button FMAS pressed until receiving the confirmation beep. With this function the radio automatically stores the six stations with the strongest signal in decreasing order of intensity of the FMT frequency band.

IMPORTANT Activating the A-STORE function cancels the stations stored previously in the FMT band.

If the TA function is on (traffic information), only the stations that send traffic information will be stored.

During automatic storage the display shows "A-STORE".

To interrupt A-STORE press button FMAS again: the radio will automatically tune to the station heard before activation of the AutoStore function.

At the end of the A-STORE function the radio automatically tunes on the first preset station in the FMT band stored on preset button 1.

On buttons numbered from 1 to 6, the stations are automatically stored that give a strong signal in that moment in the preset band.

Activating the A-STORE function in MW or LW bands will automatically select the FMT band where the function is then run.

IMPORTANT Sometimes the A-STORE function is unable to find 6 stations with a strong signal. In this case the previous stations will be stored on the free preset buttons.

EMERGENCY ALARM RECEPTION

In the RDS mode the radio is set to receive emergency announcements in the case of exceptional circumstances or events that may cause general danger (earthquakes, floods, etc.), if they are broadcast by the station tuned.

This function is activated automatically and cannot be deactivated.

During emergency announcement the display will show the message "ALARM". During this announcement the volume will change as described for traffic announcements (see paragraph "TA FUNCTION").

EON FUNCTION (Enhanced Other Network)

Certain countries have circuits which group together several stations enabled to broadcast traffic information. In this case the programme of the station being heard will be interrupted temporarily:

- to receive traffic information (only with TA function on);
- to listen to regional programmes every time these bulletins are given by one of the stations of the same circuits.

STEREOPHONIC STATIONS

If the signal received is weak, the device switches automatically from Stereo to Mono.

MENU

MENU button functions

To activate the menu function, briefly press button MENU. The display shows the word "MENU".

To scroll the menu functions use button ▲ or ▼. To change the setting of the selected function use button ◀◀ or ▶▶.

The display will show the current status of the function selected.

The functions controlled by the menu are the following:

- AF (alternative frequency search);
- TA (traffic information);
- REG (regional programmes);

- SVC (automatic volume control in relation to speed);
- EXT VOL (external audio sources control);
- IGN TIME (System power off mode radio);
- DEFAULT (reset original settings).

To exit the menu function, press button MENU again.

AF function (alternative frequency search)

Within the RDS system the radio can work in two different modes:

- “AF ON”: alternative frequency search on (the display shows “AF”);
- “AF OFF”: alternative frequency search off.

With “AF ON”, the radio is automatically tuned to the station with the strongest signal that is broadcasting the same programme. During the journey it will thus be possible to continue listening to the station chosen without having to change the frequency when changing area.

Of course, the station being listened to must be receivable in the area the car is crossing.

To turn the AF function on/off, press button MENU, and then select “AF ON” or “AF OFF”. If the AF function has been turned on the display shows “AF”.

If the radio is working in the AM band, when the AF function is activated, it passes to the FMI band on the last station selected.

TA function (traffic information)

Certain stations in the FM band (FMI, FM2 and FMT) are enabled to also broadcast information about traffic conditions. In this case the display shows “TP”.

To turn the TA (traffic announcement) function on/off, briefly press button MENU and then select “TA ON” or “TA OFF”.

IMPORTANT If the TA function (traffic information) is on, with CD, CD Changer (if installed), Telephone or Mute/Pause active: automatic station tuning will start.

With the TA function it is possible:

- to search only RDS stations that transmit in the FM band, enabled to broadcast traffic information;
- to receive traffic information although CD player or CD Changer are being used;

- to receive traffic information at a predefined minimum volume even with the radio volume off.

IMPORTANT In certain countries radio stations exist which, even if the TP function is on (the display shows “TP”), do not transmit traffic information.

If the radio is working in the AM band, when TA is activated, it passes to the FMI band on the last station heard.

The volume with which the traffic bulletin is transmitted varies depending on the listening volume:

- listening volume below 20: traffic bulletin volume = 20 (fixed value);
- listening volume above 20: traffic bulletin volume = listening volume + 1.

If the volume is changed during a traffic bulletin the value is not shown on the display and the new value is kept only for the bulletin in progress.

The TA function is interrupted by pressing any sound system button.

REG function (regional broadcast reception)

Certain national broadcasters, at determinate times of the day, transmit regional programmes which differ from region to region. This function makes it possible to tune in only on local stations (regional) (see paragraph "EON function").

Activate this function if you want to tune automatically to regional stations broadcasting in the selected band.

To turn the function on/off use button ◀◀ or ▶▶.

The display will show the current status of the function:

- "REG ON": function on.
- "REG OFF": function off.

If the function is off and a regional programme is tuned that works in a determinate area and the car enters a different area, the regional station of the new area is received.

IMPORTANT If AF and REG are both active, when passing from one region to another the radio could not tune properly to a valid alternative frequency.

SVC function (volume changing with speed)

This function makes it possible to automatically adapt the volume level to the speed of the vehicle, increasing it as the speed increases to maintain the ratio with the noise level inside the passenger compartment.

To turn the function on/off use button ◀◀ or ▶▶. The display will show the current status of the function:

- SVC OFF: function off
- SVC LOW: function on (low sensitivity)
- SVC HIGH: function on (high sensitivity).

EXT function (external audio source control)

With this function it is possible to adjust (setting from 0 to 40) or exclude (OFF) external audio sources.

To turn this function on/off, use button ◀◀ or ▶▶.

The display will show the current status of the function:

- "EXT VOL": function on.
- "EXT OFF": function off.
- "EXT 23": function on with volume level 23.

IGN TIME function (system power on/off mode radio)

This function enables to switch off the sound system according to two different modes. To turn the function on use button ◀◀ or ▶▶.

The display will show "IGN TIME" and then:

- "00 MIN ": deactivation dependent on ignition key. Sound system will switch off automatically when turning the ignition key to STOP;
- "20 MIN ": deactivation independent of ignition key. After having turned the ignition key to STOP the sound system will stay on for 20 minutes max.

IMPORTANT When the sound system is switched off automatically after turning the ignition key to STOP (for both immediate or 20-minute delayed power off), it will switch on automatically turning the ignition key to MAR. If the sound system has been switched off pressing button ON, when turning the key to MAR it will stay off.

RESTORE function

This function enables to restore default settings. Options available are the following:

- NO: no restore;
- YES: restore default settings. During this operation the display will show the message "RESTORE". At the end of this operation, the audio source will not be changed and the previous situation is displayed.

COMPACT DISC PLAYER

INTRODUCTION

QUICK
GUIDE

FUNCTIONS AND
ADJUSTMENTS

RADIO

COMPACT
DISC PLAYER

CD
CHANGER

INTRODUCTION

This section only describes CD player operation variants: as concerns sound system operation, refer to section "FUNCTIONS AND ADJUSTMENTS".

SELECTING CD PLAYER

To turn on the Compact Disc player integrated in the set, proceed as follows:

insert a CD with the set on: the first track will be played;

or

if a CD is already inserted, turn the set on and press briefly button CD to select "CD": the last heard track will be played.

For optimal playing use only original CDs. When using R/RW CDs, use top quality CDs mastered at the as low as possible speed.

INSERTING/EJECTING CD

To insert the CD set it gently in place to activate the powered loading system, which will position it correctly.

Press button ▲, with the device on, to operate the powered CD eject system. After ejection, the source heard before playing the CD will return.

If CD is not ejected, the device will reload it automatically after about 20 seconds and then will set to Tuner (Radio).

CD cannot be ejected if the device is off.

Inserting the ejected CD without fully removing it from the slot, the tuner will not change the source to CD.

POSSIBLE ERROR MESSAGES

If the CD inserted is illegible (e.g.: CD-ROM inserted, CD not inserted properly or reading error), the display will show the message “CD ERROR” for about 2 seconds.

The CD is then ejected and the previous source before CD was selected returns.

DISPLAY INFORMATION

When the CD player is working, the display shows the following information which means:

“T05”: shows the number of the track on the CD;

“03:42”: shows the time elapsed since the start of the track (if the corresponding Menu function is on);

SELECT TRACK (forward/backward)

Briefly press button ◀◀ to play the previous track and button ▶▶ to play the next one. Tracks are played in sequence: after the last track, the first one will be played and vice versa.

If playing the track started more than 3 seconds ago, pressing briefly button ◀◀ the track is played again from the start. In this case if wanting to play the previous track, press the button twice consecutively.

FAST FORWARD/BACKWARD

Keep button ▶▶ pressed to move the track selected forward at high speed and keep button ◀◀ pressed to move it quickly backward. Fast forward/backward is stopped once the button is released.

PAUSE FUNCTION

To pause the CD player, press button MUTE. The display will show "PAUSE".

To resume playing the track, press button MUTE again.

The pause function is deactivated changing the sound source.

ANTITHEFT PROTECTION

The radio is fitted with an antitheft protection system based on the exchange of information between the radio and the electronic control unit (Body Computer) installed on the vehicle.

This system warrants the highest level of security and prevents entry of the secret code every time the radio supply is disconnected.

If the result of the check is positive, the set starts working, whereas if the comparison codes are not the same or if the electronic control unit (Body Computer) is replaced, the device informs the user of the need to enter the secret code according to the procedure described in the following paragraph.

Entering the secret code

When turning the sound system on (in the event of code request), the display will show the word "CDC CODE" for about 2 seconds, followed by four dashes "----".

The secret code comprises four figures from 1 to 6, each corresponding to one of the dashes.

To enter the first digit of the code, press the corresponding key of the preset stations (from 1 to 6). Enter the other code digits in the same way.

If the four figures are not entered within 20 seconds, the display shows the word "CDC CODE" for 2 seconds and then four dashes "----". This is not to be considered as an incorrect code entry.

After entering the fourth digit (within 20 seconds), the radio starts working.

If a wrong code is entered, the radio sounds a beep, the display shows the word "CDC CODE" for 2 seconds and then four dashes "----" to warn the user that it is necessary to enter the correct code.

Every time the user enters a wrong code, the waiting time increases gradually (1 min, 2 min, 4 min, 8 min, 16 min, 30 min, 1 h, 2 h, 4 h, 8 h, 16 h, 24 h) until reaching a maximum of 24 hours. The waiting time will be shown on the display with the word "CDC WAIT". When this goes off it is possible to start the new code entry procedure.

Code Card

This is the document that certifies possession of the radio. The Code Card contains the radio model, serial number and secret code.

IMPORTANT Keep the Code Card carefully to be able to give the related data to the competent authorities in the event of theft.

CD CHANGER (CDG)



Installation and connection of a Lineaccessori CD Changer shall only be performed by Fiat Dealership.

INTRODUCTION

This section only describes CD Changer (where provided) operation variants: as concerns sound system operation, refer to section "FUNCTIONS AND ADJUSTMENTS".

SELECTING THE CD CHANGER

Turn on the set, then press briefly and repeatedly button CD until selecting "CHANGER".

POSSIBLE ERROR MESSAGES

Error messages will be displayed in the following cases:

- no CD in the CD Changer: the display will show "CD ERROR" until changing the sound source;
- selected CD is illegible (CD not in the selected position or CD not inserted properly): the display shows "CD ERROR" after the number of the selected CD. The next CD will be selected; if there are no other CDs or if they are also illegible the display will show the wording "NO CD" until the sound source is changed;
- error in CD reading: the display shows "CD ERROR". The next CD will be selected; if there are no other CDs in the CD Changer (after the last CD search will restart from the first one) or they are also illegible, if the sound source is not changed, the display will show the following:
 - "CHANGER" for about 2.5 seconds;
 - "CD ERROR" for about 5 seconds;
 - plays next source for other 5 seconds;

- a CD-ROM is inserted: next CD will be selected.

SELECTING THE CD

Press button ▲ to select the next CD and button ▼ to select the previous CD.

If the loader does not contain a disc in the position selected, the display briefly shows the wording "CD ERROR", and the next CD is played automatically.

TROUBLESHOOTING

OVERVIEW

Low volume

The Fader function shall only be set to “F” (front), to prevent sound system output power reduction and volume muting if the Fader level set is = R+9.

Required source cannot be selected

No CD loaded. Load the CD you want to play.

COMPACT DISC PLAYER

CD not played

Loaded CD is dirty. Clean the CD.
Loaded CD is scratched. Try to play another CD.

Required CD cannot be loaded

Another CD is already loaded. Press button ▲ and remove the CD.

Fiat Group Automobiles S.p.A.
Quality - Assistenza Tecnica - Ingegneria Assistenziale - Largo Senatore G. Agnelli, 5 - 10040 Volvera - Torino (Italia)
Print n. 603.83.533 - 07/2007 - Ist edition

The data contained in this publication is intended merely as a guide. FIAT reserves the right to modify the models and versions described in this booklet at any time for technical and commercial reasons.

If you have any further questions please consult your FIAT dealer.

Printed in recycled paper without chlorine.